

Stravifloor Mat-F

Installation Manual

Installation Tools and Components

- Stanley knife
- Personal protective equipment (PPE)

1 / Underscreed Layer

Unpack and unroll the Stravifloor Mat-F and allow it to acclimatize for 24 hours in the intended installation area.

Stravifloor Mat-F can be loose laid without the use of mechanical fixings or adhesive. In order to decouple the walls from the floating floor ensure the Stravifloor Mat-F is also installed onto the walls - the distance up the wall should be the same as the intended thickness of the screed/concrete to be poured.

2 / Protection Layer

A protective layer of building grade polythene should be loose laid over the Stravifloor Mat-F and continued up the wall to cover the Perimeter Strip. Allow overlaps of 100 mm.




Or Taped Joints

If a protective layer of polythene is not installed the joints of the Stravifloor Mat-F should be taped together with building grade self-adhesive tape (minimum 50 mm wide).



Recommended Duct Tapes:

- Spada® AT 132
- 3M Value Duct Tape 1900

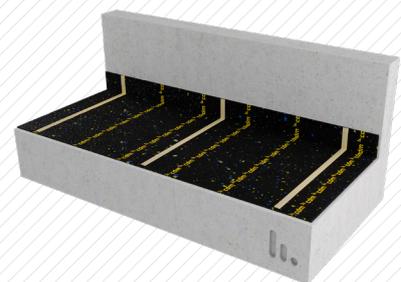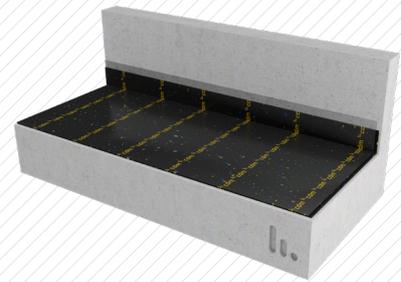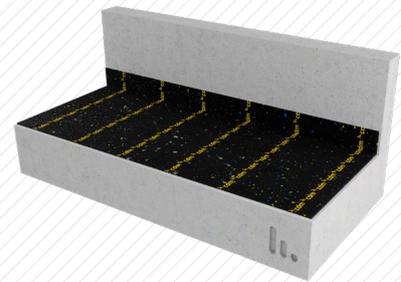

3 / Screed or Reinforced Concrete Slab

Install the screed or reinforced concrete to the required height.

If a skirting board is required leave a gap of 3 mm so there is no rigid contact between the skirting board and the new floating floor.



DISCLAIMER

This information is accurate to the best of our knowledge at the time of issue. Information, data and recommendations provided are based on industry accepted testing and prior product usage. It is intended as descriptive of the general capabilities and performance of our products and does not endorse applicability for any particular project. We reserve the right to change products, performance, and data without notice. This document replaces all information supplied prior to the publication hereof.